

Installation Instruction

Additional User Tips

- When hooking up the EE988DPG to the control panel, if a bell loop trouble is generated or the EE988DPG triggers its sounder then the provided diode must be connected as per the diagram.
- When hooking up the EE988DPG in conjunction with another sounder(s) then the provided diode must be connected as per the diagram.

